

QR Code

Disable/Enable QR Code

When disabled, the scanner will not read QR Code labels.

START / END	
PROGRAMMING BAR CODES	
	Disable QR Code DEFAULT
Enable QR Code	