



Russian



Polish



Portuguese (Brazil)



Portuguese



Turkish-Q



Turkish-F



Dutch



Hungarian



Swiss



Slovak



Spanish



German



Japanese



Vietnamese



Italian



French



Thai



Arabic



English (UK)



English (US)

Language Settings

Note: the barcode with * is default setting.

Restore Factory Default Setting

Scan below QR setting code, the scanner will be restored to factory default.



Restore Factory Default Settings

Default Configuration

Interface: USB

Operating way: Auto Scan

Ending character: Enter

Reading Version Information

Scan below QR code to get version information of this scanner.



Version Info

Interface Configuration

USB Interface

To connect the scanner with devices by USB cable, scan below QR code to configure the scanner for standard keyboard mode.



*USB

USB COM (Virtual COM)

To connect the scanner with devices by USB cable, scan below QR code to configure the scanner for virtual COM output mode (Driver is required, please contact your supplier for driver)



Virtual COM

COM (RS-232)


To connect the scanner with device by RS-232 interface, you need to match the same configuration between the scanner and device, default COM interface configuration: 9600 Baud rate, 8 bit data, No check bit, 1 stop bit.



RS-232

QUICK START GUIDE

S-HF2DV2

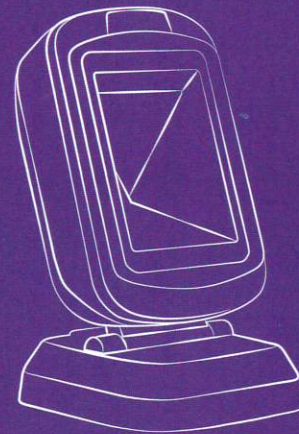

oolio

www.oolio.com

1300 166 546

sales@oolio.com

Barcode Types Reading Ability Configuration

Scan below QR code to allow or forbid reading certain type of barcode.
But in this situation (Read all 1D/2D barcode), the speed of decoding may
slow down. It is better to choose the code types that you need to
improve the decoding speed.



Read all 1D barcodes



Disallow reading 1D barcode



Read all 2D barcodes



Disallow reading 2D barcode

Reading Reverse Image Barcode



Allow



*Forbidden

Code 39 Full ASCII



Enable Full ASCII



*Disable Full ASCII

Code 32



Enable Code 32



*Disable Code 32

Suffix Configuration

User could configure the suffix by below setting codes



No Suffix



*CR



CR+LF



TAB

Codabar Start/Stop CHARS



Enable Transmit Codabar
Start/Stop CHARS



*Disable Transmit Codabar
Start/Stop CHARS

EAN/UPC Supplement



Enable Supplements-2 digits



*Disable Supplements-2 digits



Enable Supplements-5 digits



*Disable Supplements-5 digits



Enable Separator



*Disable Separator

GS1 Rule



Enable



*Disable

Sound Indicator



Enable



*Disable



*High



Medium



Low